

Copyright© 2002

MagTek®, Inc.

Printed in the United States of America

Information in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of MagTek, Inc.

MagTek and MICRImage are registered trademarks of MagTek, Inc.

REVISIONS

Rev Number	Date	Notes
1	05 Sep 02	Initial Release
2	13 Jun 03	Front Matter: added ISO line to logo, changed Tech Support phone number.

MICRIMAGE INSTALLATION AND OPERATION SUMMARY

RS232 to USB – PC
Part Number 99875246-2

JUNE 2003



MAGTEK™

REGISTERED TO ISO 9001:2000

20725 South Annalee Avenue
Carson, CA 90746

Phone: (310) 631-8602

FAX: (310) 631-3956

Technical Support: (651) 415-6800

www.magtek.com


The following is required for installation:

- MICRImage Unit
- Interface Cable
- Power Adapter

INSTALLATION

- Connect the DB25 cable to the MICRImage Unit.
- Connect the USB cable to the USB port on the PC.
- Connect the power supply to the MICRImage cable.


For a single PC, install the MICRImage cables as shown.

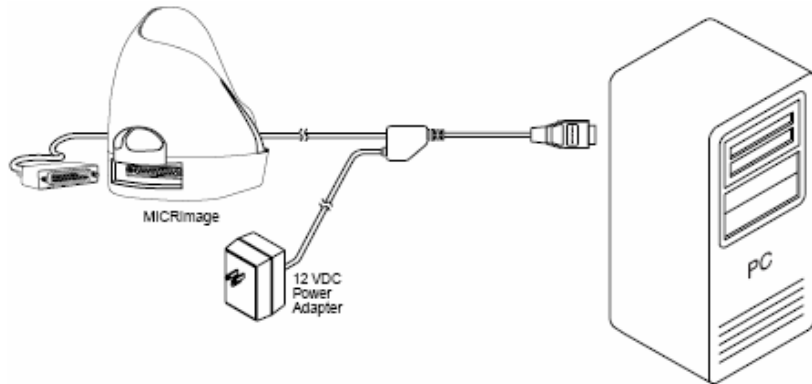

Caution

Do not place the MICRImage Reader within 6 inches of a computer monitor or power supply. These devices may cause undesirable interference with the check reading operation.

CHECK READING

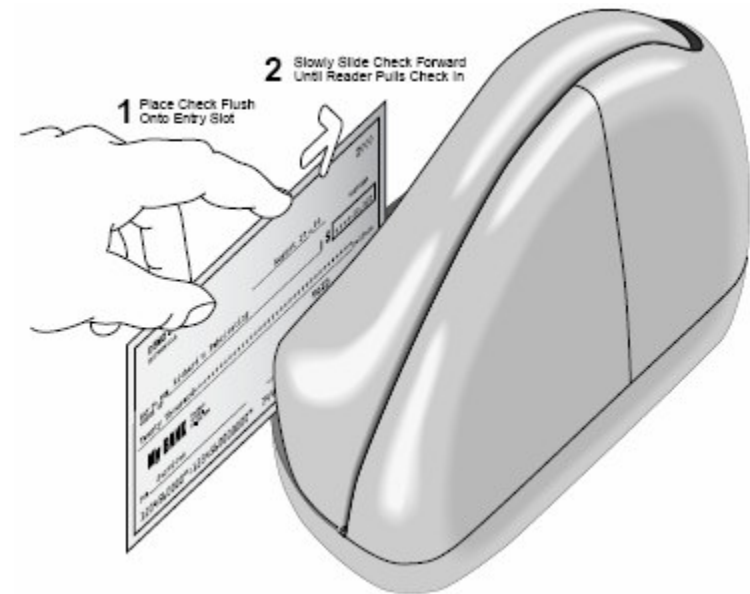

MAGNETIC STRIPE CARD READING

